


GWM WEY 03 (COFFEE 02) SUV

From 2022







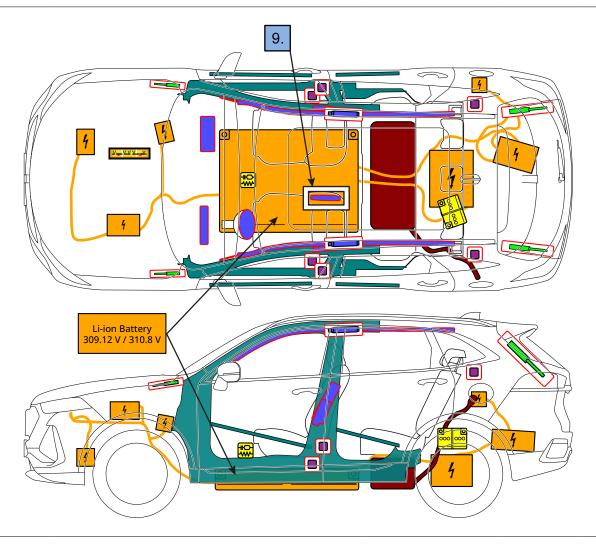

Legend

	Airbag	Stored gas inflator		Seat belt pre- tensioner		SRS control unit	0000000	Battery low voltage
	Gas strut/ Preloaded spring	High strength zone		Zone requiring special attention	<u> </u>	High voltage battery pack	2	High voltage power cable/ component
**************************************	Cable cut	Fuel tank content gasoline/ethanol	4	High voltage component				

This overview shows the maximum range of equipment of the vehicle.	ID No.	Version No.	Page No.
	LGW-WEY-V61PHEVG	V2	1/4



GWM WEY 03 (COFFEE 02)

SUV

From 2022



1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.








2. Immobilisation / stabilisation / lifting


Immobilise and stabilise the vehicle





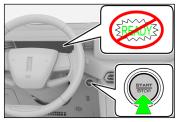

Lifting points



Apply parking brake;

• Press "P" button;

• Shut power off.

3. Disable direct hazards / safety regulations

DISABLING METHOD


















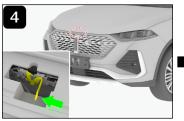

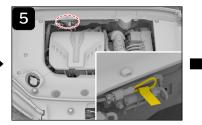

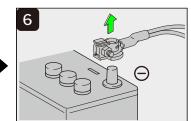



ACCESS TO 12V BATTERY







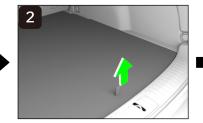

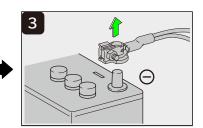

This overview shows the maximum range of equipment of the vehicle.	ID No.	Version No.	Page No.
	LGW-WEY-V61PHEVG	V2	2/4



GWM WEY 03 (COFFEE 02)

SUV


From 2022



4. Access to the occupants

WHEN THE 12 V BATTERY IS DISCONNECTED, ELECTRICAL COMPONENTS CANNOT BE OPERATED.

High strength zone












Steering column adjustment Glass types



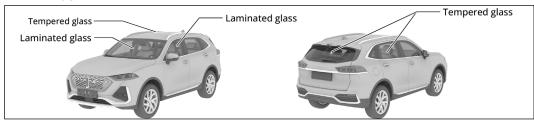

5. Stored energy / liquids / gases / solids

00000000	12 V Battery
Li-ion	309.12 V / 310.8 V
	55 L
*	680±10 g

6. In case of fire



USE LARGE AMOUNTS OF WATER.

If it is difficult to apply copious amounts of water to the high voltage battery, it is recommended to allow the high voltage battery to burn itself out.





BATTERY RE-IGNITION!











7. In case of submersion

Proper personal protective equipment should be worn when handling any flooded vehicle. Pull the vehicle out of water as much as possible, immobilise the vehicle and disable the vehicle before starting any operation (see chapter 3).

Tilt the vehicle to one side to allow water to drain out of the vehicle.

This overview shows the maximum range of equipment of the vehicle.	ID No.	Version No.	Page No.
	LGW-WEY-V61PHEVG	V2	3/4



GWM WEY 03 (COFFEE 02)

SUV

From 2022




8. Towing / transportation / storage

Location front hook



Location rear hook













STORE AT SAFE DISTANCE FROM OTHER VEHICLES!





BATTERY RE-IGNITION!

9. Important additional information



Driver's seat has a far side airbag in addition to the side airbag. Location of far side airbag is shown in the mark 9. on page 1.

10. Explanation of pictograms used

Pictogram	Designation	
5m (16.4 ft)((())	Remove smart key	
	Boot	
	Bonnet	
*	Air-conditioning component	

Pictogram	Designation
	Flammable
	Explosive
	Corrosives
☐ IR ∭	Use thermal Infrared camera

Pictogram	Designation
	Hazardous to the hu- man health
	Use water to extinguish the fire
<u>A</u>	Warning, Electricity
	General warning sign

This overview shows the maximum range of equipment of the vehicle.	ID No.	Version No.	Page No.
	LGW-WEY-V61PHEVG	V2	4/4